

Project

Better Energy^{Inc.}



TP-Link Wi-Fi Range Extender User Manual

How to configure your TP Link WiFi Range Extender?

Method 1: Via TP-Link Tether App

Get the up-to-date Tether app, and follow the app instructions to complete the setup.



Method 2: Via a Web Browser

Step 1. Plug the extender into an electrical outlet near your router and press the power button if the extender model has one

Step 2. Connect your computer to the extender via either of these methods:

 **Via Wireless:** Ensure your Ethernet connection is disconnected from the computer. Connect to the extender's network (e.g. TP-Link_Extender or TP-Link_Extender_XXXX)

 **Via Ethernet Cable** (Only Applicable for extenders with Ethernet ports): Ensure the Wi-Fi is disabled on your computer. Connect your computer to the extender via an Ethernet Cable.


Step 3. Launch a web browser and enter <http://tplinkrepeater.net> or <http://192.168.0.254> in the browser address bar. Create a password and login.

Step 4. Follow the instructions displayed on the web page to complete the initial extender configuration.

Relocation of the Range Extender

If your extender has an ethernet port, it can be used as a wireless adapter to connect any ethernet-only device such as a Blu-ray player, game console, DVR, or smart TV to your Wi-Fi network.

First connect the extender to your router, then connect your Ethernet-only device to the extender via an Ethernet cable

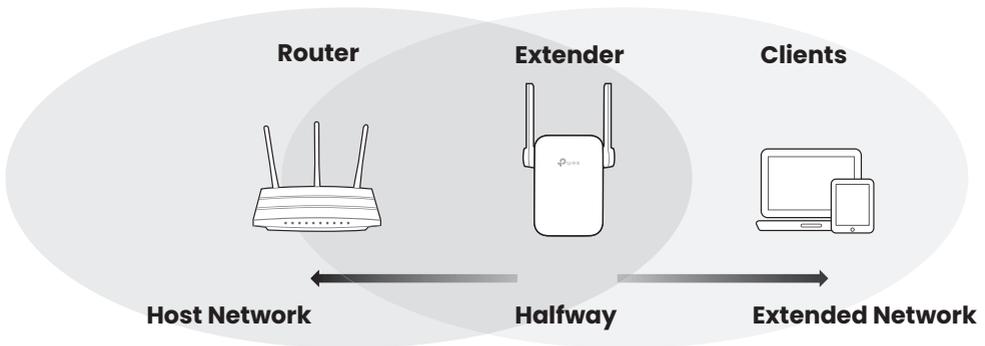

Enjoy The Internet!


Connect your device to the extender using the extended SSID and Wi-Fi password that you've set during the configuration. The default Wi-Fi password is the same as your host network

Entertainment Adapter

If your extender has an ethernet port, it can be used as a wireless adapter to connect any ethernet-only device such as a Blu-ray player, game console, DVR, or smart TV to your Wi-Fi network.

First, connect the extender to your router, then connect your Ethernet-only device to the extender via an Ethernet cable

Ethernet Connection

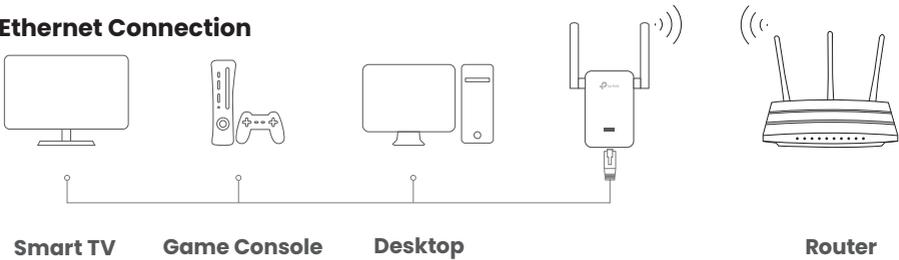

FAQ (Frequently Asked Questions)

Question 1. Why can't I see the login page after entering <http://tplinkrepeater.net> in the browser?

- Make sure your computer is connected to the extender either via the extended SSID or via an Ethernet cable (if the extender has an Ethernet port).
- Make sure your computer is set to obtain an IP address automatically
- Use the IP address to access the extender. The default IP is 192.168.0.254. If the extender is connected to the router, you should go to your router's DHCP client list to obtain the extenders's current IP address.
- Reset the extender and connect to its wireless network, enter <http://tplinkrepeater.net> or <http://192.168.0.2504> in a web browser and press Enter.

Question 2. How do I reset the extender?

- With the extender powered on, press the RESET button until the LEDs turn on momentarily, then release the button.

Note: For more troubleshooting help, please refer to FAQ on our website: <https://www.tp-link.com>.